



Trex[®] Protect[™]

JOIST, BEAM & RIM TAPE


TREX JOIST, BEAM & RIM TAPE INSTALLATION

- » Trex Protect Tape can be applied to horizontal and vertical surfaces including all joists, rim joists, beams, steps, stair stringers, blocking, ledger board, under joists hangers and other surfaces.
 - » When pulling deck boards onto the deck, a piece of plywood or wafer board can be used to overhang the edge of the deck. This will prevent the product from rolling up and pulling up from the joist.
 - » Trex Protect tape has three widths making it convenient to apply to all wood surfaces.
 - Use 1-5/8" x 50' (41.3 mm x 15.24 m) Joist Tape for joists
 - Use 3-1/8" x 50' (79.4 mm x 15.24 m) Beam Tape for all double beams
 - Use 11" x 50' (279.4 mm x 15.24 m) Rim Tape for rim joists, stairs and all flat-blocked surfaces
- NOTE:** *Trex Protect cannot be used to install Trex RainEscape*
-

INSTRUCTIONS


STEP 1

- » Clean the wood surface making sure it is dry and free of any debris.

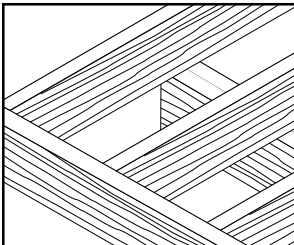


STEP 2

- » Remove the backing while applying the tape directly to the surface. Run your hand over the tape and firmly press onto the wood surface.

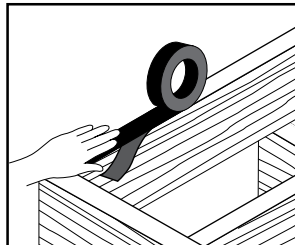

STEP 3

- » After covering the wood surface with tape, cut the tape to length with a utility knife or scissors.

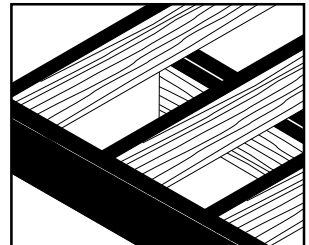

For more information, visit trexprotect.com

© 2022 Trex Company, Inc. All rights reserved. Trex[®] RainEscape[®] products are manufactured and sold by IBP, LLC under a Trademark License Agreement with Trex Company, Inc. RainEscape[®] is a federally registered trademark of IBP, LLC.

Scan for
installation video

